


PITCHING INSTRUCTIONS


Your tent includes:

- 18 x pegs
- 4 x ropes
- 1 set poles (19mm x 0.7mm and 16mm x 0.7mm)
- 2 x solid side walls

1. Select a dry, level site and clear the ground of any sharp objects. Remove the shelter from its carry bag, untie fabric ties and unroll the shelter.

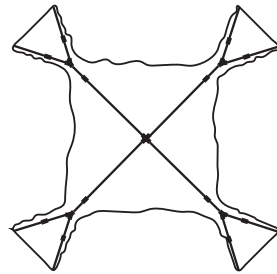


2. Unfold the legs and roof poles so they are lying flat on the ground.

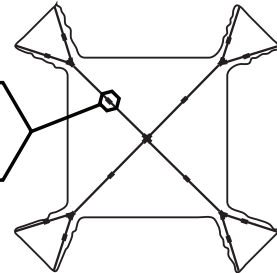


3. Extend the roof poles ensuring the pole is straight until it locks into place. Complete this on all four roof poles.


4. Stand the shelter up onto legs, unroll the webbing straps from the corners and connect to the side release buckles on the corresponding corners. This stops the corners from 'splaying' out.

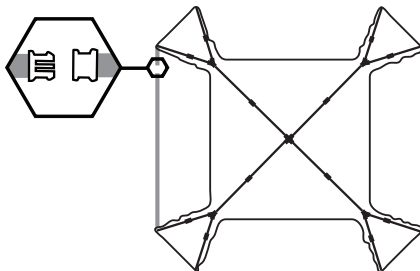

5. Extend the leg poles, working from the front of the shelter to the back, adjusting the shelter to sit square. Ensure that the pole locks into place.

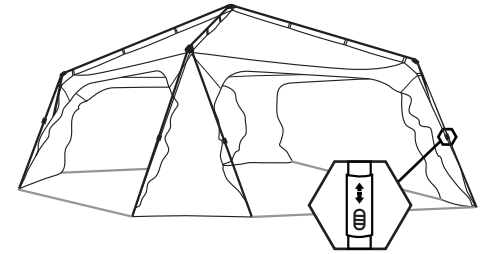


6. Step back and check the shelter is square and sitting correctly. Peg out the pegging points on the four corners, using 2 pegs per corner.

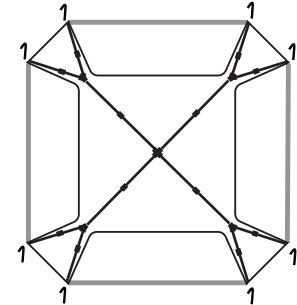

7. Peg out the guy ropes at a 45 degree angle following angle of the roof poles.

8. Remember this is a temporary shelter, not a structure, so always check it in windy conditions and do not leave it unattended.

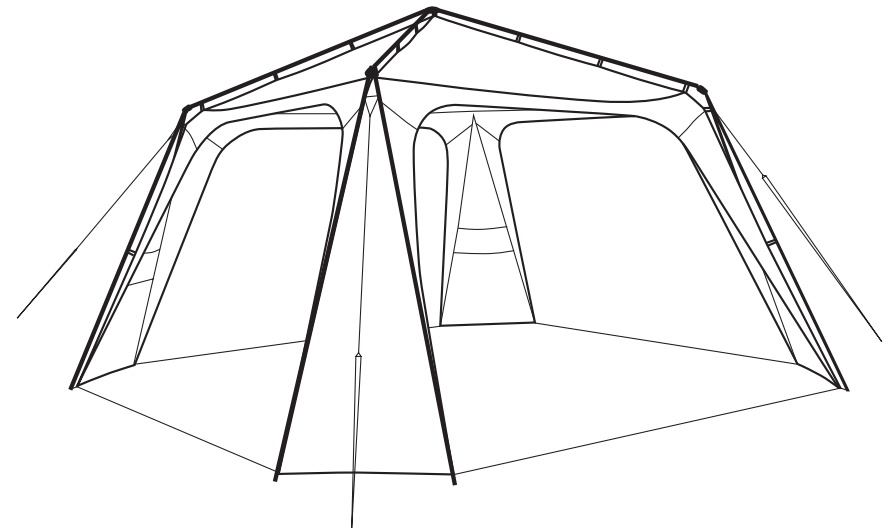

REVERSE THE PROCEDURE TO LOWER THE SHELTER

SHELTER CARE INSTRUCTIONS

PLEASE READ ALL OF THE SHELTER CARE INFORMATION AND INSTRUCTIONS INCLUDED WITH THIS SHELTER BEFORE USING YOUR SHELTER FOR THE FIRST TIME.

1. Before you use your new shelter, fully unpack and pitch it at home. It is important to familiarise yourself with the set up procedure and the various features.
2. Select a site that is level, clear of any sharp objects, is dry, will drain well if it rains and is protected from wind and other elements.
3. Keep clear of overhead power lines and trees when setting up your shelter.
4. For best and easiest results, enlist the help of at least one other person to assist in pitching the shelter.
5. Keep all flame and heat sources away from this tent fabric. Do not use open flame or gas appliances in or near your shelter.
6. Do not use aerosol sprays or any solvent based products in or around your shelter as these could damage the fabric or special coatings. These products include but are not limited to: repellent spray, hair sprays, alcohol, detergents, fly spray, petrol, kerosene etc.
7. Please note, the warranty on this shelter will be deemed void if the product is used for any purpose other than a temporary, recreational use shelter.
8. Handle the poles carefully. When unfolding and folding the poles, do not allow the shock cord to pull and snap the ends together. This can damage the poles ends and result in breakage when the pole is tensioned.
9. Especially in windy conditions, it is essential that you attach guy ropes and fasten them to the ground. We suggest you insert the pegs into the ground at a 45° angle towards the shelter, not straight down. Please note, your shelter will not be covered under warranty if wind damage occurs.
10. Use all of the guy ropes and pegs included to ensure your tent is secure and to prevent damage to both yourself and the tent. Check guy ropes/pegs daily.
11. To clean your shelter, only ever use a soft sponge and warm water. DO NOT use excess force or other harsh cleaners to remove marks from the fabric.
12. Ensure the shelter is completely dry and clean before storing away and ensure to store it in a dry environment.

IMPORTANT

1. Under certain conditions (cold weather, high humidity etc.) condensation may form on the inside of your shelter. Condensation can occur for many reasons including vapour from your breath, perspiration, cooking nearby or wet clothing inside your shelter. This does NOT mean your shelter is leaking through the fabric.

2. Try to avoid pitching your shelter under trees as tree limbs, falling leaves, sap, bird droppings or excess water dripping from the trees can cause damage to the shelter fabric and its special coatings resulting in leakage or discolouration.
3. Only remove the pegs by pulling on the peg itself. NEVER pull on the shelter or the webbing loops to remove pegs as it could result in damage to the shelter or personal injury.
4. DO NOT leave shelter pitched for weeks at a time as extended exposure to the sun's ultraviolet rays can damage and/or cause it to discolour. Your shelter will not be covered under warranty if you leave it up for many weeks at a time.

STORAGE

1. NEVER store your shelter wet or dirty (even for short periods of time).
2. NEVER store your pegs inside your shelter. Always use the separate bags they are supplied in.
3. You may want to insure your shelter against loss or damage.

WARRANTY INFORMATION

The warranty period for this pod is found on the packaging and full details are on the Kiwi Camping website - www.kiwicamping.co.nz.

KEY POINTS:

The original purchaser of this product is offered a warranty if during this time period the product fails due to a fault in either materials or workmanship. Service under this warranty is available by returning the product, with your proof of purchase, to where it was purchased. If after inspection it is determined that the product is defective, we will repair or replace it (at our discretion) free of charge. This warranty does not cover misuse, damage caused by accident, storm or wind damage, mildew, neglect, UV degradation and fair wear and tear. Please note, the warranty on this tent will be deemed void if the product is used for any purpose other than a temporary shelter. If the claim is not deemed a warranty or is outside it's warranty period, we can repair the product at a nominal cost.



Distributed by:
Aber Living, Hamilton, NZ
www.kiwicamping.co.nz

5224-06/20